



VALLEY

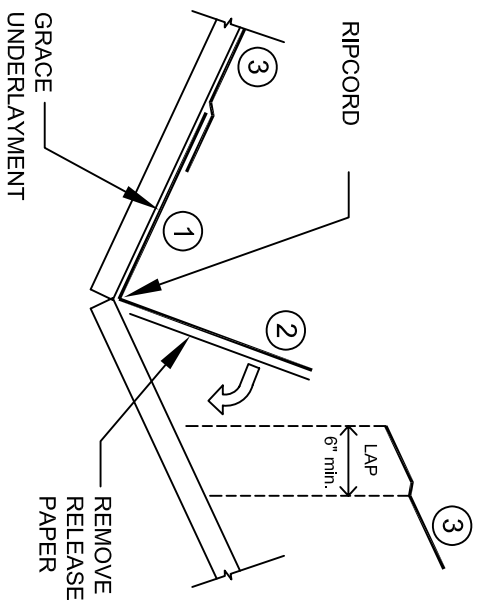


- A. INSTALL IN ORDER AS SHOWN BY NUMBERS
- B. ENGAGE RIPCORD TO SPLIT RELEASE PAPER
- C. ALIGN & INSTALL GRACE UNDERLAYMENT OVER VALLEY
- D. REFER TO NRCA OR SMACNA FOR VALLEY METAL FLASHING AND ROOF COVERING OPTIONS

EAVE: GRACE UNDERLAYMENT PRIOR TO FASCIA

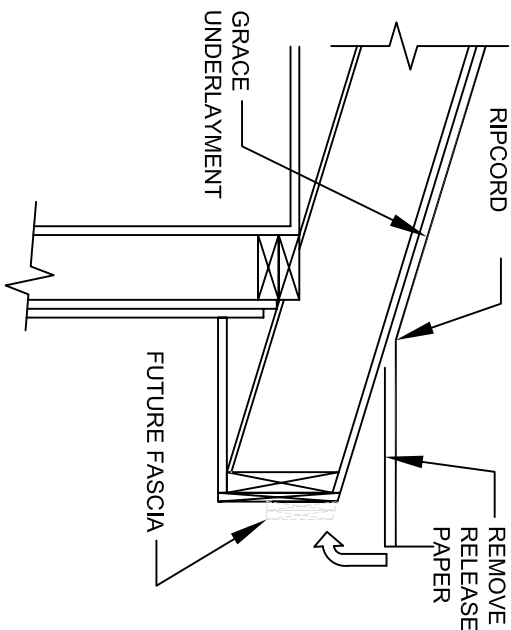

- A. ENGAGE RIPCORD TO SPLIT RELEASE PAPER
- B. ALIGN GRACE UNDERLAYMENT ALONG EAVE
- C. REMOVE RELEASE PAPER FROM UPPER HALF OF GRACE UNDERLAYMENT AND APPLY TO ROOF DECK
- D. REMOVE RELEASE PAPER ALONG EAVE AFTER FASCIA IS INSTALLED OR FOR FUTURE TIE-IN

FRONT WALL TO ROOF DECK

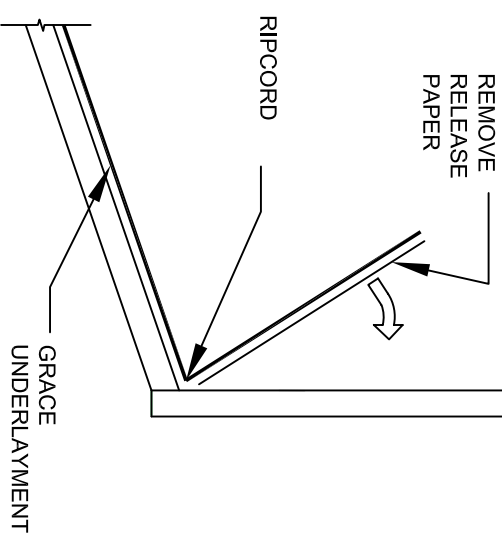

- A. ENGAGE RIPCORD TO SPLIT RELEASE PAPER
- B. REMOVE RELEASE PAPER FROM GRACE UNDERLAYMENT AND APPLY TO ROOF DECK
- C. REMOVE REMAINING RELEASE PAPER AND APPLY TO WALL
- D. EXTEND GRACE UNDERLAYMENT ON THE WALL SHEATHING ABOVE THE HIGHEST EXPECTED LEVEL OF SNOW AND ICE

NOTES:

- A. VISIT GRACECONSTRUCTION.COM FOR THE MOST CURRENT DETAILS AND INSTALLATION VIDEO
- B. REFER TO PRODUCT DATA SHEETS ON WEB SITE FOR FURTHER INFORMATION
- C. RIPCORD HAS BEEN REMOVED FOR EASE OF INSTALLATION

USE OF RIPCORD®

GRACE ICE & WATER SHIELD®

Drawing: IWSDET-112

Scale: Not to scale

Effective Date: 05/16/2006

Supersedes: 01/27/2004