



## TENSION TIE-DOWNS

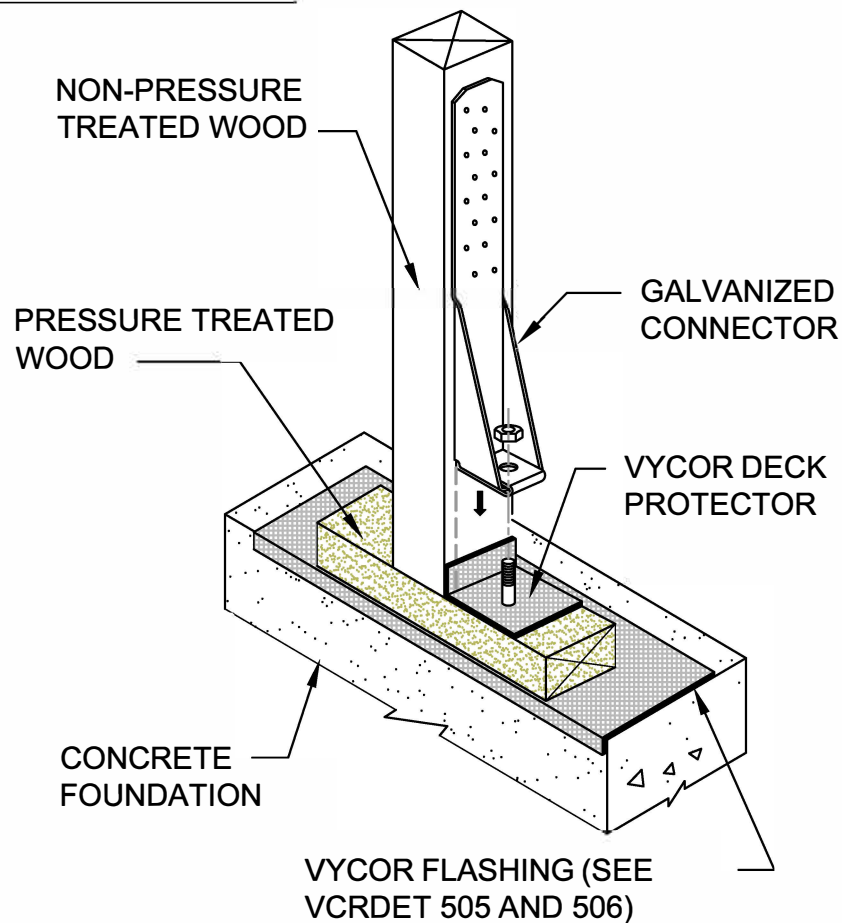

## SILL PLATE CONNECTORS

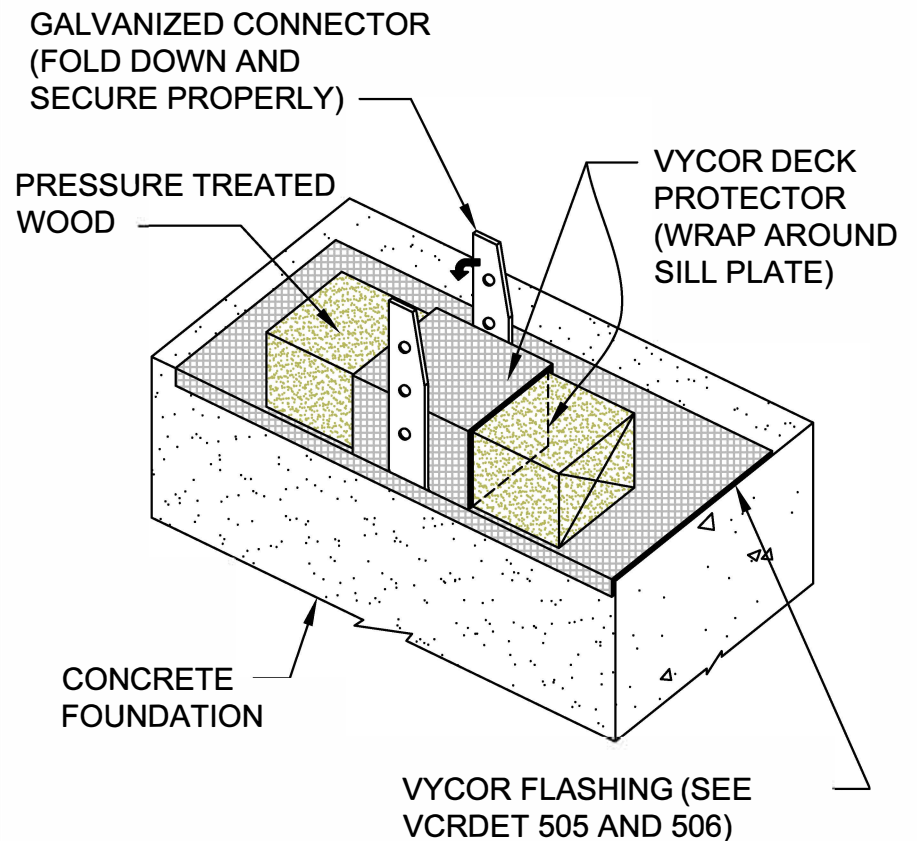

### NOTES:

- A. VISIT [GCPAT.COM](http://GCPAT.COM) FOR THE MOST CURRENT DETAILS, INSTALLATION VIDEO AND PRODUCT LITERATURE
- B. APPLY VYCOR DECK PROTECTOR ONTO PRESSURE TREATED WOOD WHEREVER GALVANIZED CONNECTORS WOULD COME INTO CONTACT WITH PRESSURE TREATED WOOD
- C. FASTEN GALVANIZED CONNECTOR PER MANUFACTURER GUIDELINES AND USE APPROPRIATE HOT-DIPPED GALVANIZED FASTENERS PER ASTM A153
- D. IF VYCOR IS TO BE EXPOSED TO UV, VYCOR SHOULD BE TRIMMED FLUSH TO GALVANIZED CONNECTOR TO PREVENT UV EXPOSURE